


**Geberit AquaClean 8000**

**■ GEBERIT**



# **Operating instructions**

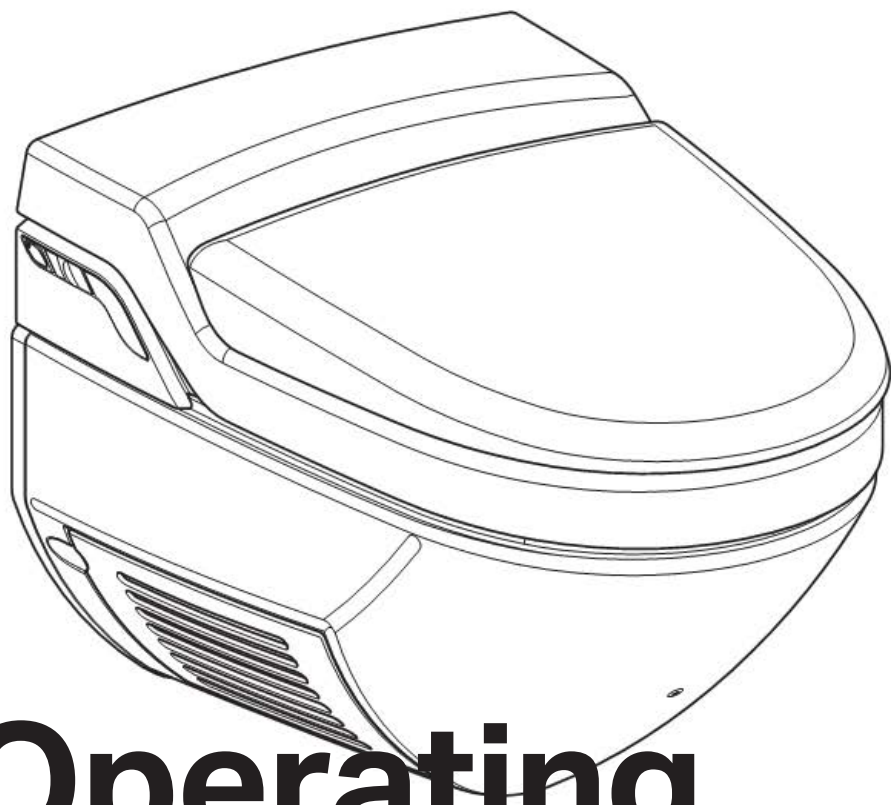

For true well-being .....	4
Easy to operate.....	4
Any questions about Geberit AquaClean? .....	4
Warranty card registration .....	4
Environment.....	4
Important notes .....	5
Intended use .....	5
Declaration of conformity .....	5
For your safety .....	5
Operation.....	5
Explanation of symbols .....	5
Geberit AquaClean 8000 operation .....	6
Overview of controls .....	6
Control panel .....	6
Integrated control panel .....	7
Using Geberit AquaClean 8000.....	8
What you should know .....	9
Spray shield .....	9
WC seat and lid with lowering function.....	9
Care and cleaning .....	10
Care instructions.....	10
Components.....	10
Permissible cleaning agents and cleaning equipment.....	11
Non-permissible cleaning agents and cleaning equipment .....	12
Tips.....	13
Cleaning the WC seat, WC lid and casing .....	14
Cleaning the hinges, the cover and the spray arm .....	14
Cleaning the WC ceramic appliance.....	14
Troubleshooting .....	15
Malfunctions during operation.....	15
Cleaning or replacing the spray nozzle .....	17
Removing and fitting the WC seat and WC lid.....	18
Technical data .....	19
End user warranty .....	20

## For true well-being

The Geberit AquaClean 8000 is a toilet which reclaims the source of freshness and cleanliness: water. A single water jet cleans your bottom with a pleasant and gentle feel. Application is simple yet effective. Toilet paper or a towel can be used for drying.

## Easy to operate

Operation is effortless. Simply press the clearly labelled buttons on the side of the unit.

## Any questions about Geberit AquaClean?

Our after-sales team will be happy to respond to your enquiries.  
Please contact your responsible Geberit sales company.

## Warranty card registration

So that we can provide you with optimum support, please take the opportunity to register your contact details online - the process is very straightforward and takes next to no time to complete.

- [www.i-love-water.com](http://www.i-love-water.com)

## Environment

This product meets the requirements of the EU directive "Restriction of Hazardous Substances" (2002/95/EC). It is largely free from hazardous substances such as lead, mercury, cadmium and chrome VI, which are environmental pollutants.

All old Geberit AquaClean 8000 can be returned to Geberit free of charge for appropriate disposal. This arrangement applies to all EU member states as well as to Switzerland and Norway. Please contact your responsible Geberit sales company or visit the website of your respective country for collection point addresses.

## Important notes

### Intended use

The Geberit AquaClean 8000 is a toilet which is designed for cleaning the anal area. Its use for any other purpose is deemed improper. Geberit accepts no liability for the consequences of improper use.

### Declaration of conformity

You can obtain a copy of the declaration of conformity from your responsible Geberit sales company.

### For your safety

- In the event of evidence of damage to the Geberit AquaClean, disconnect the unit from the mains immediately and contact Geberit Customer Service.
- If the mains connection cable is damaged, it must be replaced by a skilled person.
- Never open and repair the Geberit AquaClean yourself. Do not modify the unit or add any additional modules. The Geberit AquaClean contains live parts. Opening the unit exposes those present to fatal danger.
- Repairs may only be carried out by trained and authorised skilled persons using original spare parts and accessories.
- The Geberit AquaClean must only be connected to a mains voltage conforming to the specification plate. You will find more technical data in the chapter titled "Technical data".

### Operation

- People who are not familiar with the Geberit AquaClean 8000, especially children, must be shown how to use it.
- Operation and maintenance work may only be performed by the operator or user as described in these operating instructions.
- The Geberit AquaClean 8000 may only be operated with potable water.

### Explanation of symbols



#### **DANGER**

Refers to a potentially dangerous situation that may cause serious injury or death.




Refers to important information.

## Geberit AquaClean 8000 operation

### Overview of controls




- 1 Control panel
- 2 Power switch
- 3 Maintenance flap
- 4 Specification plate and serial number
- 5 Cleaning instructions for end users

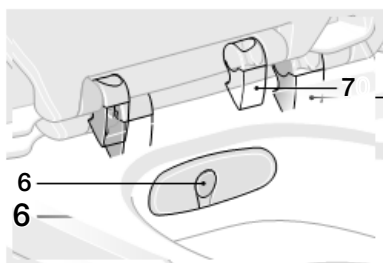

- 6 Spray arm
- 7 User detection

### Control panel

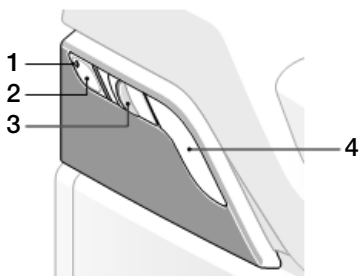

- 1 LED display of storage water heater
- 2 Water heater function ON/OFF/economy mode
- 3 Spray intensity
- 4 Start and stop shower

## Integrated control panel




### <Shower>, start and stop

Press the button: The spray arm moves into position and the shower procedure starts. The shower automatically stops after 20 s.

You can stop the shower before this by pressing the <shower> button.

Press the button again: The shower stops.



### <Spray intensity>

Adjust the sliding button during the shower procedure to change the spray intensity.

There are 7 spray intensity levels to choose from.

The memory function stores the most recently set spray intensity.



### <Water heater function> ON/OFF/economy mode

Pressing the button switches the water heater function on, off or to economy mode.

LED	Meaning
Lights up blue	Heating element is switched on
Flashes blue	Switching to economy mode. In economy mode (factory setting), the heating element only switches on if user detection is activated. The warm-up time is 3 to 4 minutes.
Does not light up	Heating element is switched off or economy mode is switched on and user detection is not activated.
Flashes red	Error message (see "Troubleshooting")

## Using Geberit AquaClean 8000

Shower concept:

- The spray nozzle is automatically cleaned with fresh water before and after each shower procedure.

You can control the intensity of the water jet.


The shower spray gradually cools down continuously during the shower procedure.



Thanks to the user detection, the shower procedure can only be activated once someone sits down on the toilet. You start the toilet flush as usual by pressing the flush plate on the cistern. The Geberit AquaClean 8000 can be used as a normal toilet at any time.

---

- 1 Sit down on the toilet.
- 2 Press the <shower> button.



Result

The shower starts and stops after 20 s.


You can interrupt the shower procedure before this by pressing the <shower> button.



## What you should know


### Spray shield

The spray shield can be used to test the performance of the Geberit AquaClean 8000 without anyone sitting on the toilet.

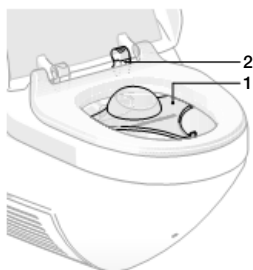

- 1 Spray shield
- 2 User detection

### WC seat and lid with lowering function

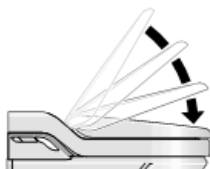

Dampers cushion the WC seat and lid noiselessly and slow down closing. The seat and lid open just like any normal WC seat and lid.



Do not press the WC seat and lid down with your hand. This will damage the dampers.

## Care and cleaning

Geberit AquaClean 8000 is a high-quality, easy-care product.

The WC ceramic appliance has a special coating. This coating draws water drops together to form spheres which drip away very effectively. Residue such as limescale and dirt is taken up by the water drops and simply flushed away with them. This effect is very environmentally friendly, as aggressive WC cleaning agents are no longer required. The WC seat and lid are easy to clean and, if necessary, to remove. Similarly, the spray nozzle can easily be replaced if it becomes blocked with limescale or clogged with dirt.




Aggressive cleaning agents can damage the material surface. Therefore, we ask that you follow the care and cleaning instructions below.

## Care instructions

As a general rule, water, a mild washing-up liquid that is kind to the skin and a not scratching sponge or a soft cloth will suffice for regular cleaning. Take action to prevent the build-up of limescale deposits. When you have finished cleaning, wipe away any remaining drops of water on the cover with a soft cloth (do not use a cleaning agent when doing this).

## Components

To meet demands for design and performance, the Geberit AquaClean 8000 comprises a number of different components. Therefore, we ask that you follow the cleaning instructions below, as the warranty does not cover surface damage and material damage caused by improper use.

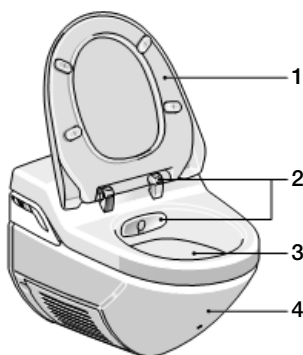

- 1 WC seat and WC lid
- 2 Hinges, cover and spray arm
- 3 WC ceramic appliance
- 4 Casing

## Permissible cleaning agents and cleaning equipment

### Cleaning agents



Cleaning agents are permitted to have a low acid content, e.g. they may contain citric acid.



Cleaning agents should ideally be diluted with water.



Cleaning agents must be fluid.



Cleaning agents must be dermatologically tested.



The use of foaming cleaning agents is permitted.

### Cleaning equipment



Sponge, eraser



Cloth, shammy leather



Toilet brush

## Non-permissible cleaning agents and cleaning equipment

### Cleaning agents



The use of powdery cleaning agents, such as scouring powder or scouring agent, is not permitted.



The use of corrosive cleaning agents, such as concentrated drain cleaners, is not permitted.



The use of cleaning agents which may irritate the eyes or the skin is not permitted.



The use of cleaning agents with a high chlorine concentration is not permitted.



The use of abrasive cleaning agents, such as sand or scouring liquid, is not permitted.

### Cleaning equipment



Scratching sponge



Steel wool, steel cleaner, scrubbing sponge

## Tips

Problem	Fault clearance
Urine scale deposits on the WC ceramic appliance	To clean, apply a mild bathroom cleaner ( $4 \leq \text{pH value} \leq 9$ ) and leave to work for 30 minutes, then rinse with water. Cleaning gels and foam cleaners are particularly good for this type of cleaning, as they stick to sloping surfaces.
Rusty water residue on the WC ceramic appliance	Will not damage the coating on the WC ceramic appliance. To clean, apply a mild bathroom cleaner ( $4 \leq \text{pH value} \leq 9$ ) and leave to work for 30 minutes, then rinse with water.
Use of disinfectants	Apply disinfectant with a soft cloth and wipe the components clean. Test the disinfectant for suitability.
Limescale deposits on the WC ceramic appliance	To clean, apply a mild bathroom cleaner ( $4 \leq \text{pH value} \leq 9$ ) and leave to work for 30 minutes, then rinse with water.
Limescale deposits on the cover	Apply a mild bathroom cleaner with a soft cloth and wipe the chrome cover clean. Then rinse with water and dry the cover.
Spray nozzle blocked with limescale or clogged by foreign bodies in the water	To clean the spray nozzle, submerge it in standard limescale remover for a few hours.

## Cleaning the WC seat, WC lid and casing



Do not use scratching sponges or scouring agents for cleaning. We also advise against the use of cleaners containing solvent or acid, limescale removers, vinegar and cleaning agents containing acetic acid. They corrode the surface and can lead to discolouration.

- 1 Wipe the components with a soft cloth and a mild washing-up liquid which is kind to the skin.
- 2 Dry the components with a soft cloth.

## Cleaning the hinges, the cover and the spray arm



Do not use scratching sponges or scouring agents for cleaning. We also advise against the use of cleaners containing solvent or acid, limescale removers, vinegar and cleaning agents containing acetic acid. They corrode the surface.

- 1 Wipe the components with a soft cloth and a mild washing-up liquid which is kind to the skin.
- 2 Dry the components with a soft cloth.

## Cleaning the WC ceramic appliance

When cleaning the WC ceramic appliance, always lift up the WC seat and WC lid. Any vapours rising off cleaning agents can corrode the surface.



Do not use scratching sponges or abrasive scouring agents for cleaning.

- 1 Clean the WC ceramic appliance with a mild bathroom cleaner or a mild all-purpose cleaner.
- 2 Rinse the WC ceramic appliance with water.
- 3 Use a toilet brush to remove stubborn stains and rinse with water.
- 4 Wipe the cover with a soft damp cloth and then dry it.

## Troubleshooting



### **DANGER**

Danger of fatal electric shock

- ▶ Never open and repair the device yourself
- ▶ Never replace damaged mains connection cables yourself
- ▶ Contact customer service

## Malfunctions during operation


Malfunction	Cause	Fault clearance
No function	Mains plug is not connected to power outlet	Connect the mains plug. If the power outlet is located inside the casing, contact customer service
	Power switch is OFF	Switch on the power switch
	Defective fuse on electrical distributor	Replace the fuse on the electrical distributor
	User detection IR window on upper housing section is dirty	Clean the IR window with a soft cloth
	Software error	Switch the power switch off for 30 s and then back on again
	Power supply is interrupted	Have the power supply checked by a skilled person
Shower water temperature is too low	Heating element is not switched on	Set the <water heater function> to ON on the control panel
	Warm-up time too short when heating element is in economy mode	Set the <water heater function> to ON on the control panel
	Software error	Switch the power switch off and back on again after 30 s
Shower spray is too weak or no water is spraying out at all	Spray intensity is set too low	Increase the spray intensity
	Spray nozzle clogged or blocked with limescale	Clean or replace the spray nozzle
Spray arm does not retract	Power supply is interrupted	Restore the power supply. The spray arm will retract automatically
	Shower toilet is defective	Switch off the shower toilet and contact customer service

<b>Malfunction</b>	<b>Cause</b>	<b>Fault clearance</b>
Lowering function not working	Hydraulics are defective	Contact customer service
	Left and right hinges are not closed	Close hinges fully
Water is continuously dripping into WC ceramic appliance	Flush valve system is leaky	Contact customer service
Water is dripping onto the floor	There is a leak	Switch off the shower toilet. Cut off the water supply and pull out the mains plug. If the power outlet and the water supply valve are located inside the casing, contact customer service
Red LED on control panel flashes	A safety device has switched off the shower toilet for a short period	Switch the power switch off and back on again after 30 s



## Cleaning or replacing the spray nozzle


- 1 Lift up the WC seat and WC lid.
- 2 Push the <spray intensity> sliding button forwards while pressing the <shower> button.

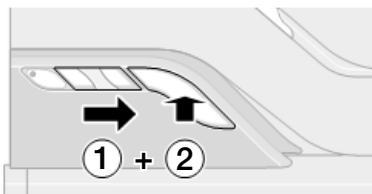

### Result

The spray arm extends without spraying any water.

- 3 Hold the spray arm with one hand and carefully remove the spray nozzle with the other.

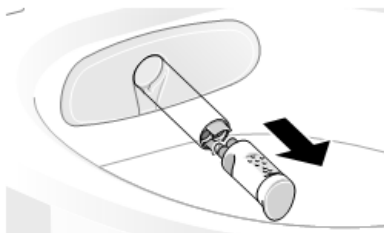

- 4 Clean and descale the spray nozzle.
- 5 Press the <shower> button.


### Result

The spray arm returns to its starting position without nozzle.


- 6 Clean the opening of the spray arm.
- 7 Connect the cleaned or new spray nozzle to the spray arm.

## Removing and fitting the WC seat and WC lid


- 1 Lift up the WC seat and WC lid and release the two hinges by pressing down and sliding to the centre.

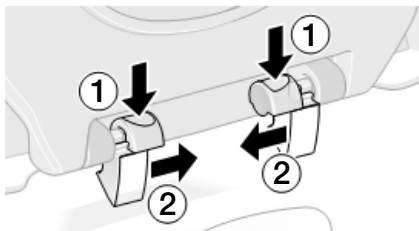

- 2 Remove the WC seat and WC lid from the device.

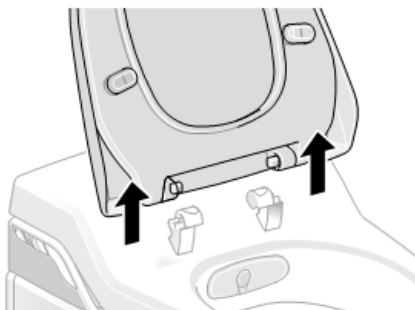

- 3 Once they have been cleaned, reinsert the WC seat and WC lid into the fastening. Slide the two hinges outwards.

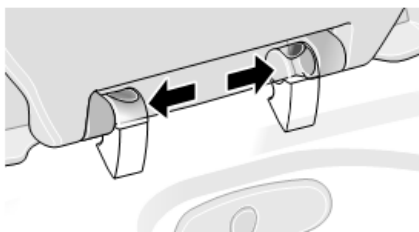

Result

The WC seat and WC lid are locked.

- 4 Close the WC seat and WC lid.

## Technical data

Nominal voltage	230 V AC
Mains frequency	50–60 Hz
Power consumption	1000 W
Power consumption in economy mode / with heating switched on	0.5 / 9 W
Protection degree	IP x4
Protection class	I
Length of mains connection cable	70 cm
Flow rate, anal shower	2.1–5.5 l/min
Water temperature factory setting	37 °C
Storage temperature	-10 – +60 °C
Spray time factory setting	20 s
Number of shower pressure settings, shower spray	7
Flow pressure range	1–10 bar
Storage water heater capacity	2.0 l
Maximum load WC seat / WC lid	150 kg
Operating temperature	10–40 °C

## End user warranty

The following end user warranty is provided in addition to and does not affect your contractual partner's liability for defective products.

The Geberit company ("Geberit") responsible for the place of installation of the Geberit AquaClean product ("product") shall provide the end user with a warranty for the product identified by the serial number on the warranty card. The scope of this warranty is as follows:

1. Geberit guarantees that the product shall be free from material defects and manufacturing faults for a period of 3 years ("warranty period") calculated from the date of installation at the end user's premises. Warranty scope:
  - Within the first two years of the warranty period, a customer service representative authorised by Geberit shall rectify any material defects or manufacturing faults free of charge by repairing or replacing the defective parts.
  - In the third year of the warranty period, Geberit shall supply replacements for defective parts free of charge to the customer service representative authorised by Geberit and contracted by the end user to repair the product.

The end user shall not be entitled to assert more extensive claims against Geberit on the basis of this warranty.

2. Claims can only be made under the warranty if:
  - The product has been installed and put into operation by an installation company or by customer service personnel authorised by Geberit;
  - No modifications have been made to the product; in particular, no parts have been removed, replaced or added; and
  - The product defect has not been caused by improper installation or use, nor can it be attributed to inadequate care or maintenance;
  - Claims shall only be made during the third year of the warranty period if the end user has completed the enclosed warranty card in full and returned it to the Geberit company responsible for the place of installation within 90 working days of the installation date.
3. This warranty applies solely to places of installation in countries in which Geberit has its own sales company or is represented by a sales partner.
4. The warranty is exclusively subject to the substantive law of the country in which Geberit has its place of business. The United Nations Convention on Contracts for the International Sale of Goods is expressly excluded. The exclusive place of jurisdiction for all disputes arising from or in connection with this warranty is the location of Geberit's headquarters.





Plumber:

First name:

Surname:

Company:

Address:

Postcode:

Town:

Installation date:

Signature:

Serial number

- ☐

bahama beige
- ☐

white alpine
- ☐

manhattan
- ☐

pergamon

**(UK) Geberit Sales Ltd.**  
**Geberit House**  
**Academy Drive**  
**Warwick**  
**Warwickshire CV34 6QZ**

**T (0)1926 516 800**  
**T (0)1926 516 809**  
**In Eire T +44 1622 717 811**

→ [www.geberit.co.uk](http://www.geberit.co.uk)

**(AE) Geberit International Sales AG**  
**Dubai Branch**  
**P.O. Box 54715,**  
**Dubai Airport Free Zone**  
**East Wing, Bldg- 4A, 4th Floor, 401,**  
**Dubai - UAE**

**T +971 4 204 5477**  
**F +971 4 204 5497**

→ [www.geberit.ae](http://www.geberit.ae)

**(ZA) Geberit Southern Africa (Pty.) Ltd.**  
**17-15 Street, Eastgate Gardens**  
**Commercial Park**  
**Sandton, South Africa**

**T +27 11 444 5070**  
**F +27 11 444 5992**

→ [www.geberit.co.za](http://www.geberit.co.za)